

ECOSTATIC SYSTEM

DISMOUNTING GUIDELINES

Remove all the wheel bolts.



Lift the rim plate from the inside with a tyre lifter (or two) and keep it up with 3 small blocks of at least 1" or 3cm thickness (in white on the first photograph below). Then separate the tyre bead from the rim (ideally with a bead breaker RFI 041 as per the second photograph below) until the rim plate and seal can be removed.



Lift the bead of the tyre (ideally with bead spreader RFI 016). Loosen and remove one set of bolts and clamping plate to disconnect 2 of the RunFlat segments. Ensure that the RunFlat is no longer tightly wrapped around the rim.



Turn the wheel around on the other side and place the rim on blocks. Separate the other tyre bead from the rim (ideally with a bead breaker RFI041 as per the second photograph below) until the tyre and RunFlat slides downwards onto the floor. Remove the rim.



Turn the tyre back on its other side. Lift the bead to allow room for undoing the other two sets of bolts and clamping plates. Take the 3 segments out of the tyre one by one.



RunFlat International Limited

Gawne Lane, Cradley Heath, West Midlands, B64 5QY United Kingdom

Telephone : +44 (0) 1384 414845 Fax : +44 (0) 1384 414849

e-mail : info@runflatinternational.com Web Site : www.runflatinternational.com