

# REMOVAL INSTRUCTIONS

## FOR 2 PIECE BOLT TOGETHER WHEELS

Keep these instructions with the fitting tools in the vehicle tool kit



**01** Deflate the tyre and undo all of the flange nuts in turn.



**02** Remove the ring of the wheel.



**03** Lift the top bead of the tyre (ideally with bead spreader RFI 016/A) and insert plastic or wooden blocks to access the fixings. Undo all of the fixing bolts.



**04** After all of the fixing bolts have been removed, lift the tyre and Runflat off the rim. Spread the tyre bead apart (ideally with bead spreader RFI 016/A) and remove the Runflat segments.

Please see page 02 for Fitting Tools


# REMOVAL INSTRUCTIONS

## FOR 3 PIECE DEMOUNTABLE FLANGE WHEELS


Keep these instructions with the fitting tools in the vehicle tool kit




**01** Deflate tyre and compress flange using the compression bracket, compression rod and compression nut.

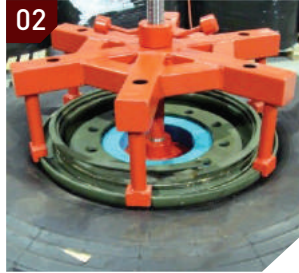

**02** Remove flange and seal.

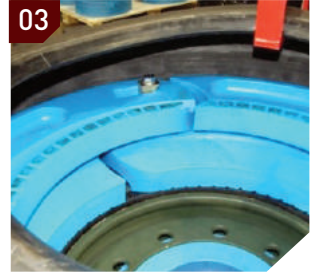

**03** Insert metal tyre lifting arms. Using the compression nut and removal block, use the hydraulic cylinder to push the wheel rim down.

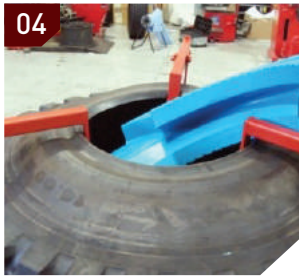

**04** Remove RunFlat system from the wheel and tyre assembly.

Please see page 02 for Fitting Tools